


INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION


SAFETY TIPS

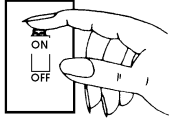


Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

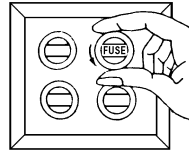


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

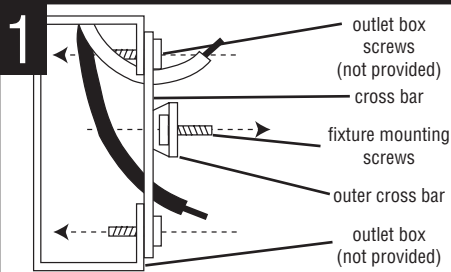


1 THREAD fixture mounting screws (provided) into outer cross bar. ATTACH cross bar to outlet box with outlet box screws (not provided).

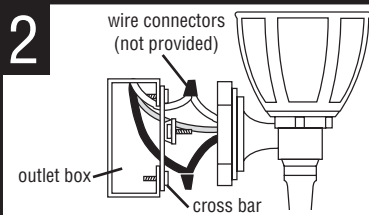


2 CONNECT THE WIRES. NOTE: Attach black fixture wire to black supply wire, white fixture wire to white supply wire. Do not mix them up. Use approved electrical tape or wire connectors (not provided). Connect bare fixture ground wire to ground wire from outlet box. NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES!

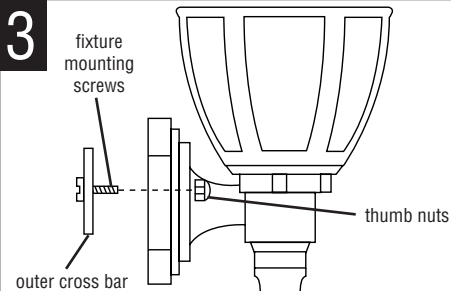


3 POSITION THE FIXTURE HOUSING over the fixture mounting screws and secure in place with the thumb nuts provided.

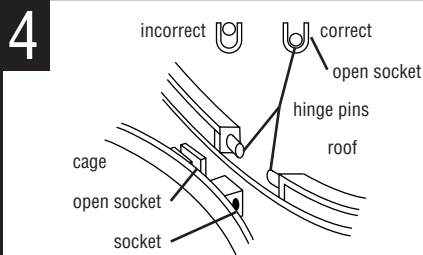

4 SLIP ONE HINGE PIN on roof into hole in socket on cage and snap other hinge pin into open socket. Be sure hinge pin is completely seated in open socket.

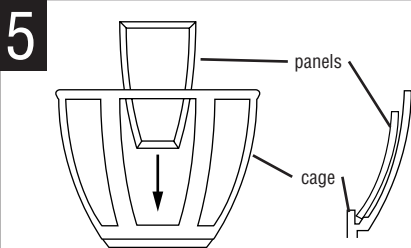

5 INSTALL PLASTIC PANELS, beveled side out, by sliding panels down cage in slots on inside of cage. Make sure panels are all the way down into seats in cage.

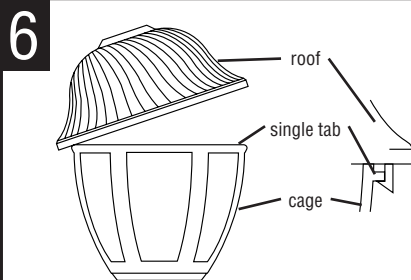

6 Lower roof and snap into place.


(INSTRUCTIONS CONTINUE ON BACK SIDE)

I204XLE0SES

INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION


SAFETY TIPS

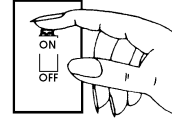


Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

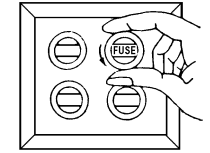


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

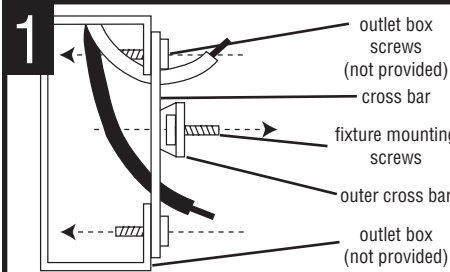


1 THREAD fixture mounting screws (provided) into outer cross bar. ATTACH cross bar to outlet box with outlet box screws (not provided).

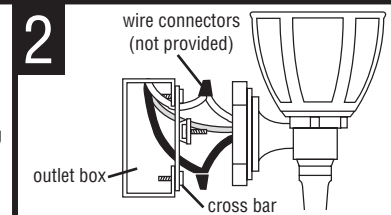


2 CONNECT THE WIRES. NOTE: Attach black fixture wire to black supply wire, white fixture wire to white supply wire. Do not mix them up. Use approved electrical tape or wire connectors (not provided). Connect bare fixture ground wire to ground wire from outlet box. NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES!

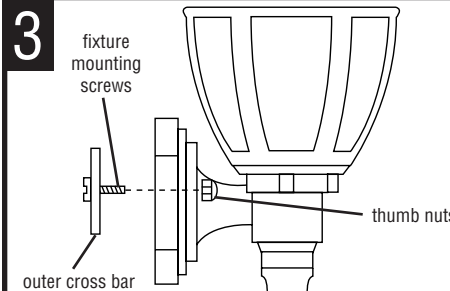


3 POSITION THE FIXTURE HOUSING over the fixture mounting screws and secure in place with the thumb nuts provided.

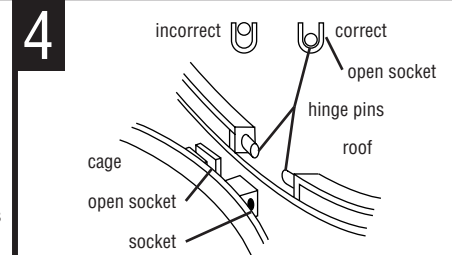

4 SLIP ONE HINGE PIN on roof into hole in socket on cage and snap other hinge pin into open socket. Be sure hinge pin is completely seated in open socket.

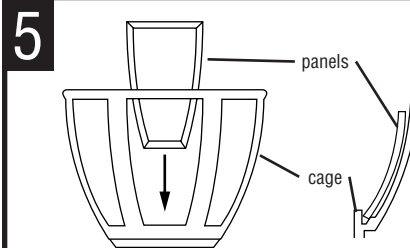

5 INSTALL PLASTIC PANELS, beveled side out, by sliding panels down cage in slots on inside of cage. Make sure panels are all the way down into seats in cage.

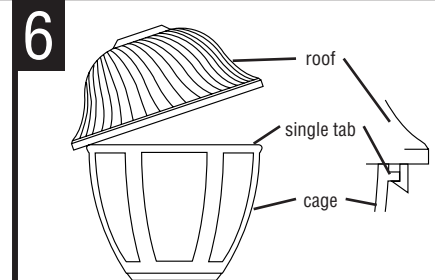

6 Lower roof and snap into place.


(INSTRUCTIONS CONTINUE ON BACK SIDE)

I204XLE0SES

INSTALLATION INSTRUCTIONS

(CONTINUED FROM OTHER SIDE)

7 fixture housing
caulk
photo sensor window

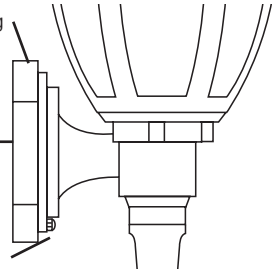


NOTE: Fixture MUST be caulked with an acrylic caulk where fixture housing meets mounting surface. This provides a water tight seal when fixture is installed.



Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

CAUTION: Do not turn on without diffuser installed. Do not touch LEDs or circuit board. LED optics could be damaged. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

 This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.




The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.

INSTALLATION INSTRUCTIONS

(CONTINUED FROM OTHER SIDE)

7 fixture housing
caulk
photo sensor window

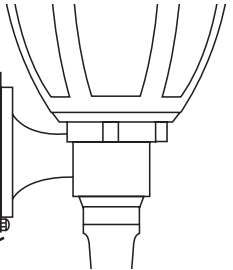


NOTE: Fixture MUST be caulked with an acrylic caulk where fixture housing meets mounting surface. This provides a water tight seal when fixture is installed.



Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

CAUTION: Do not turn on without diffuser installed. Do not touch LEDs or circuit board. LED optics could be damaged. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

 This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.